



IVECO PTO-11(ALL DIAGRAPHIC)



IVECO PTO-11 (TÜM DİYAGRAMLI)

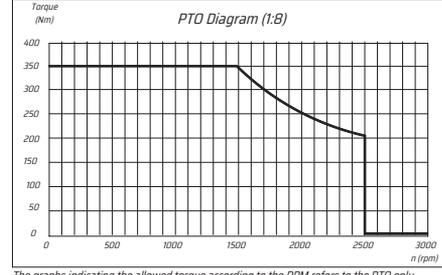

The graphs indicating the allowed torque according to the RPM refers to the PTO only.
It is necessary to check the torque limit of the gearbox before fitting the PTO.



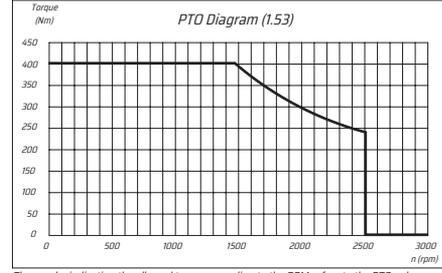


The graphs indicating the allowed torque according to the RPM refers to the PTO only.
It is necessary to check the torque limit of the gearbox before fitting the PTO.

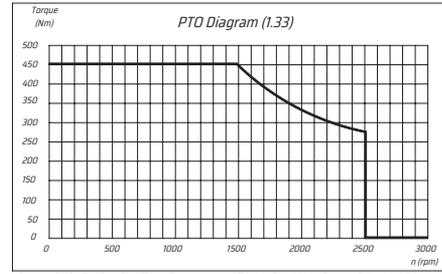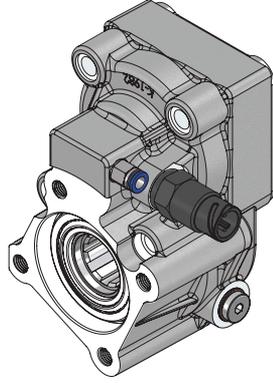

The graphs indicating the allowed torque according to the RPM refers to the PTO only.
It is necessary to check the torque limit of the gearbox before fitting the PTO.

(SW) Switch
(WS) Without Switch

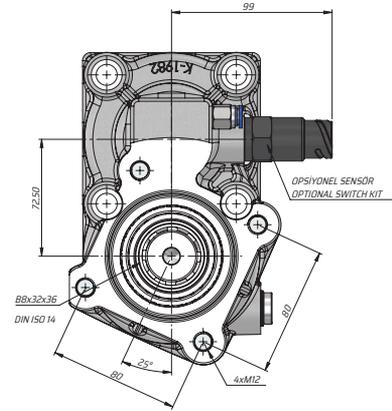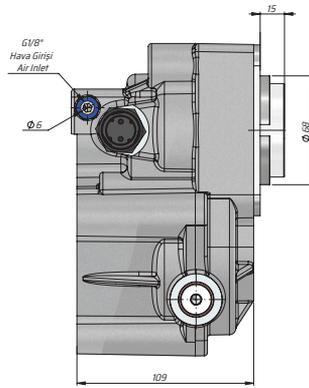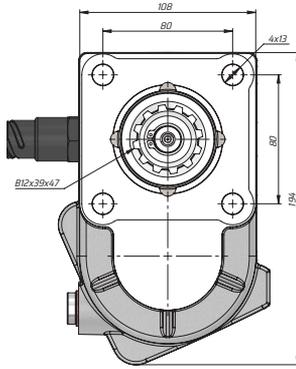

Şanzıman No / Gearbox No

ZF16S251-221-151-150-130,ZF55/ AK/65-120-111-110-92,GPZF55/AK/65-90-80-70-66-65-55-50-42-36-35/ ZF 95 75/ 95109/16S109/ ZF AK 680/AK 690/5680/5690

PTO Code	Ratio	Version	Max torque	Mounting side	Rotation
PT2VCS18SW	1.8	17	350	Rear	Ccw
PT2VCS18WS					
PT2VCS153SW	1.53		400		
PT2VCS133SW	1.33	450			

(SW)-Switch
(WS)-Without Switch